

3G Data Card Connectors

| Manufacturer | Model | Connector | Device Type |
|-----------------|-------|--------------|------------------|
| ERICSSON | | | |
| Ericsson | W25 | SMAP | Broadband Router |
| Ericsson | W30 | MCX | Broadband Router |
| Ericsson | W35 | MCX | Broadband Router |
| HUAWEI | | | |
| Huawei | B970 | SMAP | Broadband Router |
| Huawei | E122 | CRC9 | USB Modem |
| Huawei | E1550 | No Connector | USB Modem |
| Huawei | E156G | CRC9 | USB Modem |
| Huawei | E160 | CRC9 | USB Modem |
| Huawei | E160E | CRC9 | USB Modem |
| Huawei | E160G | CRC9 | USB Modem |
| Huawei | E1612 | CRC9 | USB Modem |
| Huawei | E166 | No Connector | USB Modem |
| Huawei | E169 | CRC9 | USB Modem |
| Huawei | E169G | No Connector | USB Modem |
| Huawei | E170 | No Connector | USB Modem |
| Huawei | E1750 | No Connector | USB Modem |
| Huawei | E176 | CRC9 | USB Modem |
| Huawei | E1762 | CRC9 | USB Modem |
| Huawei | E176G | CRC9 | USB Modem |
| Huawei | E180 | No Connector | USB Modem |
| Huawei | E1820 | CRC9 | USB Modem |
| Huawei | E216 | No Connector | USB Modem |
| Huawei | E219 | No Connector | USB Modem |
| Huawei | E220 | No Connector | USB Modem |
| Huawei | E226 | No Connector | USB Modem |
| Huawei | E230 | No Connector | USB Modem |
| Huawei | E270 | No Connector | USB Modem |
| Huawei | E272 | No Connector | USB Modem |
| Huawei | E510 | No Connector | USB Modem |
| Huawei | E600 | CRC9 | PCMCIA Card |
| Huawei | E612 | CRC9 | PCMCIA Card |
| Huawei | E618 | CRC9 | PCMCIA Card |
| Huawei | E620 | CRC9 | PCMCIA Card |
| Huawei | E630 | CRC9 | PCMCIA Card |
| Huawei | E660A | CRC9 | PCMCIA Card |
| Huawei | E800 | SSMB | Express Card |

3G Data Card Connectors

| Manufacturer | Model | Connector | Device Type |
|--------------|---------|--------------|--------------|
| Huawei | E870 | SSMB | Express Card |
| Huawei | E880 | SSMB | Express Card |
| Huawei | EG162G | No Connector | USB Modem |
| Huawei | K3565-Z | No Connector | USB Modem |
| Huawei | K3715 | No Connector | USB Modem |
| Huawei | UMG1691 | CRC9 | USB Modem |
| Huawei | UMG181 | CRC9 | USB Modem |

MAXON

| | | | |
|-------|-----------|------|-----------|
| Maxon | Turbo II | SMAP | USB Modem |
| Maxon | Turbo III | SMAP | USB Modem |

NETCOMM

| | | | |
|---------|--------|------|------------------|
| Netcomm | 3G10WV | SMAP | Broadband Router |
| Netcomm | 3G9W | SMAP | Broadband Router |
| Netcomm | 3G9WB | SMAP | Broadband Router |
| Netcomm | 3G9WT | SMAP | Broadband Router |

NOVATEL WIRELESS

| | | | |
|------------------|---------|--------------------------------------|-------------|
| Novatel Wireless | M720 | R151 | PCMCIA Card |
| Novatel Wireless | MC727 | TS9 | USB Modem |
| Novatel Wireless | MC760 | TS9 | USB Modem |
| Novatel Wireless | MC930D | No Connector | USB Modem |
| Novatel Wireless | MC950D | No Connector | USB Modem |
| Novatel Wireless | MCD3000 | MS-147 (Not Available from Panorama) | USB Modem |
| Novatel Wireless | PC720 | R151 | PCMCIA Card |
| Novatel Wireless | S620 | R151 | PCMCIA Card |
| Novatel Wireless | S720 | R151 | PCMCIA Card |
| Novatel Wireless | U630 | R151 | PCMCIA Card |
| Novatel Wireless | U720 | MS-147 (Not Available from Panorama) | USB Modem |
| Novatel Wireless | U727 | TS9 | USB Modem |
| Novatel Wireless | U730 | R151 | PCMCIA Card |
| Novatel Wireless | U740 | R151 | PCMCIA Card |
| Novatel Wireless | U760 | TS9 | USB Modem |
| Novatel Wireless | USB720 | MS-147 (Not Available from Panorama) | USB Modem |
| Novatel Wireless | USB727 | TS9 | USB Modem |
| Novatel Wireless | USB760 | TS9 | USB Modem |
| Novatel Wireless | V620 | R151 | PCMCIA Card |
| Novatel Wireless | V640 | R151 | PCMCIA Card |
| Novatel Wireless | V740 | R151 | PCMCIA Card |

PANORAMA ANTENNAS

Frogmore, London, SW18 1HF, United Kingdom

T: +44 (0)20 8877 4444

E: sales@panorama-antennas.com

W: www.panorama-antennas.com

3G Data Card Connectors

| Manufacturer | Model | Connector | Device Type |
|------------------|-------|-----------|--------------|
| Novatel Wireless | X720 | R151 | Express Card |
| Novatel Wireless | X950D | R151 | Express Card |
| Novatel Wireless | XU870 | R151 | Express Card |

OPTION WIRELESS

| | | | |
|-----------------|-----------------|--------------|------------------|
| Option Wireless | 3G QUAD | RMCP | PCMCIA Card |
| Option Wireless | 7.2 HSDPA | RMCP | PCMCIA Card |
| Option Wireless | EDGE | RMCP | PCMCIA Card |
| Option Wireless | Express 441 | No Connector | Express Card |
| Option Wireless | Express 442 | No Connector | Express Card |
| Option Wireless | Express HSUPA | RMCP | Express Card |
| Option Wireless | Fusion | RMCP | PCMCIA Card |
| Option Wireless | GlobeSurfer II | MCLP | Broadband Router |
| Option Wireless | GlobeSurfer III | MCLP | Broadband Router |
| Option Wireless | GT Max | RMCP | PCMCIA Card |
| Option Wireless | HSDPA | RMCP | PCMCIA Card |
| Option Wireless | iCON 031 | No Connector | USB Modem |
| Option Wireless | iCON 210 | No Connector | USB Modem |
| Option Wireless | iCON 225 | No Connector | USB Modem |
| Option Wireless | iCON 315 | No Connector | USB Modem |
| Option Wireless | iCON 401 | Moebius | USB Modem |
| Option Wireless | iCON 431 | No Connector | USB Modem |
| Option Wireless | iCON 451 | No Connector | USB Modem |
| Option Wireless | iCON 452 | No Connector | USB Modem |
| Option Wireless | iCON 505 | No Connector | USB Modem |
| Option Wireless | iCON HSUPA USB | No Connector | USB Modem |
| Option Wireless | iCON XY | No Connector | USB Modem |
| Option Wireless | iCON322 | No Connector | USB Modem |
| Option Wireless | MAX HSDPA | RMCP | Express Card |

SAMSUNG

| | | | |
|---------|------|--------------|-----------|
| Samsung | Z800 | No Connector | USB Modem |
|---------|------|--------------|-----------|

SIERRA WIRELESS

| | | | |
|-----------------|--------------|------|--------------|
| Sierra Wireless | AirCard 305 | TS9 | PCMCIA Card |
| Sierra Wireless | AirCard 402 | TS9 | Express Card |
| Sierra Wireless | AirCard 501 | TS9 | Express Card |
| Sierra Wireless | AirCard 502 | TS9 | Express Card |
| Sierra Wireless | AirCard 503 | TS9 | Express Card |
| Sierra Wireless | AirCard 555D | SSMB | PCMCIA Card |

PANORAMA ANTENNAS

Frogmore, London, SW18 1HF, United Kingdom

T: +44 (0)20 8877 4444

E: sales@panorama-antennas.com

W: www.panorama-antennas.com

3G Data Card Connectors

| Manufacturer | Model | Connector | Device Type |
|-----------------|--------------|-----------|--------------|
| Sierra Wireless | AirCard 580 | SSMB | PCMCIA Card |
| Sierra Wireless | AirCard 595 | RM281 | PCMCIA Card |
| Sierra Wireless | AirCard 597E | SSMB | Express Card |
| Sierra Wireless | AirCard 775 | SSMB | PCMCIA Card |
| Sierra Wireless | AirCard 850 | SSMB | PCMCIA Card |
| Sierra Wireless | AirCard 860 | SSMB | PCMCIA Card |
| Sierra Wireless | AirCard 875 | SSMB | PCMCIA Card |
| Sierra Wireless | AirCard 880 | SSMB | PCMCIA Card |
| Sierra Wireless | AirCard 880E | SSMB | Express Card |
| Sierra Wireless | AirCard 880U | SSMB | USB Modem |
| Sierra Wireless | AirCard 881 | SSMB | PCMCIA Card |
| Sierra Wireless | AirCard 881E | SSMB | Express Card |
| Sierra Wireless | AirCard 881U | SSMB | USB Modem |
| Sierra Wireless | APEX 880 | SSMB | USB Modem |
| Sierra Wireless | Compass 597 | TS9 | USB Modem |
| Sierra Wireless | Compass 885 | TS9 | USB Modem |
| Sierra Wireless | Compass 888 | TS9 | USB Modem |
| Sierra Wireless | Compass 889 | TS9 | USB Modem |
| Sierra Wireless | USB301 | TS9 | USB Modem |
| Sierra Wireless | USB302 | TS9 | USB Modem |
| Sierra Wireless | USB305 | TS9 | USB Modem |
| Sierra Wireless | USB306 | TS9 | USB Modem |
| Sierra Wireless | USB307 | TS9 | USB Modem |
| Sierra Wireless | USB308 | TS9 | USB Modem |
| Sierra Wireless | USB309 | TS9 | USB Modem |
| Sierra Wireless | USB598 | TS9 | USB Modem |

SONY ERICSSON

| | | | |
|---------------|--------|--------------|--------------|
| Sony Ericsson | EC400 | SSMB | Express Card |
| Sony Ericsson | EC400G | SSMB | Express Card |
| Sony Ericsson | MD300 | No Connector | USB Modem |
| Sony Ericsson | MD400 | No Connector | USB Modem |
| Sony Ericsson | MD400G | No Connector | USB Modem |
| Sony Ericsson | PC300 | SSMB | PCMCIA Card |

ZTE

| | | | |
|-----|-------|--------------|-------------|
| ZTE | MF100 | No Connector | USB Modem |
| ZTE | MF110 | No Connector | USB Modem |
| ZTE | MF300 | No Connector | PCMCIA Card |
| ZTE | MF332 | M198 | PCMCIA Card |

PANORAMA ANTENNAS

Frogmore, London, SW18 1HF, United Kingdom

T: +44 (0)20 8877 4444

E: sales@panorama-antennas.com

W: www.panorama-antennas.com

3G Data Card Connectors

| Manufacturer | Model | Connector | Device Type |
|--------------|----------|--------------------------------------|-------------|
| ZTE | MF622 | MS-147 (Not Available from Panorama) | USB Modem |
| ZTE | MF626 | No Connector | USB Modem |
| ZTE | MF626+ | No Connector | USB Modem |
| ZTE | MF627 | No Connector | USB Modem |
| ZTE | MF633+ | TS9 | USB Modem |
| ZTE | MF633BP+ | TS9 | USB Modem |
| ZTE | MF636 | No Connector | USB Modem |
| ZTE | MF636+ | M852 | USB Modem |
| ZTE | MF637 | No Connector | USB Modem |
| ZTE | MF645 | TS9 | USB Modem |
| ZTE | MF668 | TS9 | USB Modem |
| ZTE | MF668+ | TS9 | USB Modem |